
# Bambu Lab X1Combo & X1-Carbon Combo 30 Printer

#### Quick Start

Please review the entire guide before operating the printer.

\* Safety Notice: Do not connect to power until assembly is complete.

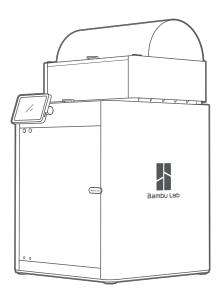

## \*Warning:

The AMS supports spools with a width of 50-68mm.


When operating the AMS, we recommend using Bambu Filament, which has been thoroughly tested to work with the AMS. Please make sure to avoid using soft materials like TPU or damp PVA, as they can get stuck in the AMS, and please avoid using cardboard spools as the spool may slip. If you run into any issues with specific filaments, please let us know so that we can provide better advice to our community.








### **Component Introduction**

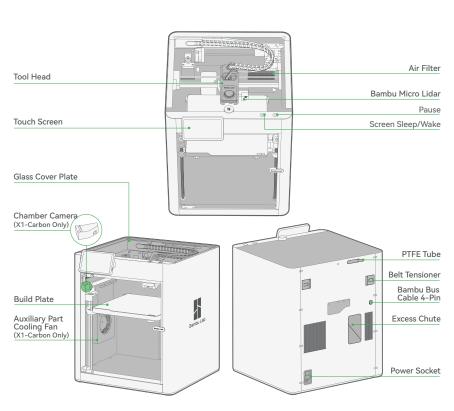

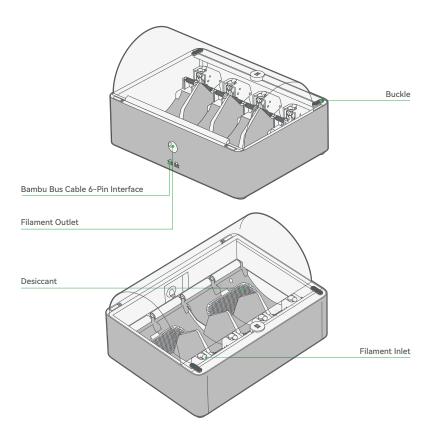

## **Accessory Specification**



Touch Screen



Spool Holder



250g Filament (x3)



Spare Hot End



Nozzle Wiping Pad (x2)



Power Cord



Spare Filament Cutter (x2)



Bambu Bus Cable-6Pin



Allen Key H1.5 Allen Key H2



Unclogging Pin Tool



Spare Sheet for Bambu Cool Plate (x2)



Flexible Build Plate (Pre-installed on build plate)




Bambu Bus Cable-4Pin




Bambu Scraper



Glue Stick for Build Plate

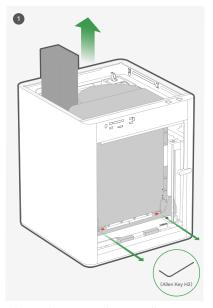


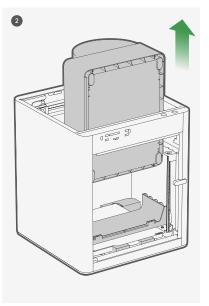


Take out the accessory box. Use Allen Key H2 to remove the screws as pictured.

Take out the AMS by sliding it out through the top.


\*We recommend using the short end of the Allen Key to unlock the screws more easily.

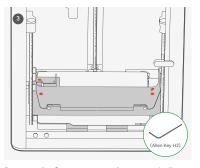

Remove the four screws as the arrows indicate.

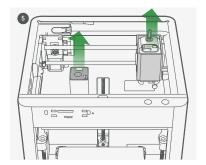

Remove the carboard from the tool head. Romove the foam from the excess chute.

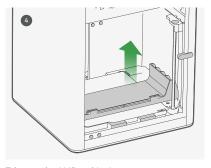


Take out the AMS cushioning.



### **Spool Holder Assembly**

\*The spool holder is only necessary when printing with filaments that are not supported for use with the AMS.

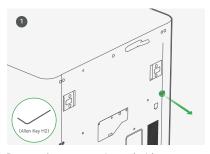


Remove the screw as pictured with an Allen Key H2.



Secure the spool holder with two screws from the accessory box.


#### **Screen Installation**

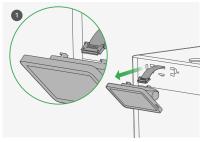


Pull the Flexible Printed Circuit (FPC) out about 50mm.



Insert the FPC into the port by pressing the terminal as pictured.

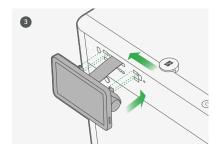


Insert the screen back to the slot on the printer, then lock it by pushing it to the left.

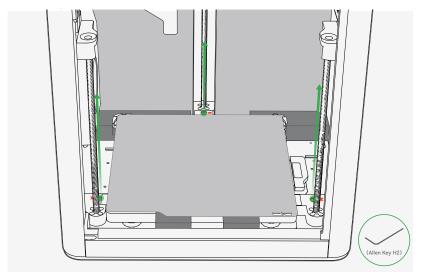


Remove the three screws with an Allen Key H2 to unlock the hot bed. Connect the printer to power. Follow the instructions on the screen to complete the initial calibration.


DO NOT remove the protective foam from beneath the hot bed until after the initial calibration is complete.

#### **First Print**

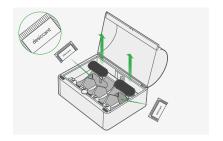

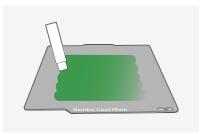

Apply a thin layer of glue on the build plate.

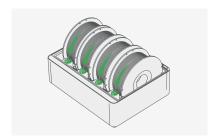

Place at least one spool of Bambu Filament into the AMS. Turn on the power to start the printer and the AMS. Insert the filament into the filament inlet. The filament will be automatically pre-loaded when detected.

\*We recommend first printing a single-color model with the supplied Bambu PLA Basic.



Press " = " - "internal". Select a file to start the first print.

\*We recommend using one of the pre-loaded files as a first test print.

# Specification

ltem		Specification	
		X1-Carbon	X1
Printing Technology		Fused Deposition Modeling	
	Build Volume(W*D*H)	256*256*256 mm	
Body	Chassis	Steel	
	Shell	Aluminum & Glass	Plastic & Glass
Tool Head	Hot End	All-Metal	
	Extruder Gears	Hardened Steel	Steel
	Nozzle	Hardened Steel	Stainless Steel
	Max Hot End Temperature	300℃	
	Nozzle Diameter (Included)	0.4 mm	
	Nozzle Diameter (Optional)	0.2 mm, 0.6 mm, 0.8 mm	
	Filament Cutter	Yes	
	Filament Diameter	1.75 mm	
	Build Plate	Flexible Steel Plate	
Hot bed	Build Plate Surface(Included)	Bambu Cool Plate, Bambu Engineering Plate	
	Build Plate Surface (Optional)	Bambu High Temperature Plate	
	Max Build Plate Temperature	110°C@220V, 120°C@110V	
Speed	Max Speed of Tool Head	500 mm/s	
	Max Acceleration of Tool Head	20 m/s^2	
	Max Hot End Flow	32 mm^3/s @ABS	
	Part Cooling Fan	Closed Loop Control	
	Hot End Fan	Closed Loop Control	
Cooling	Control Board Fan	Closed Loop Control	
	Chamber Temperature Regulator Fan	Closed Loop Control	
	Auxiliary Part Cooling Fan	Closed Loop Control	Optional
	Air Filter	Activated Carbon Filter	Optional
Supported Filament	PLA, PETG, TPU,ABS,ASA,PVA,PET	Yes	
	PA, PC	Ideal	Capable
	Carbon/Glass Fiber Reinforced Polymer	Ideal	Not Recommended
	Bambu Micro Lidar	Yes	
Sensors	Chamber Monitoring Camera	1920*1080 Included	Optional
	Door Sensor	Yes	
	Filament Run Out Sensor	Yes	
	Filament Odometry	Optional with AMS	
	Power Loss Recover	Yes	

Physical Dimensions	Dimensions	389*389*457mm	
	Net Weight	14.13kg	13.18kg
Electrical Requirements	Voltage	100-240 VAC, 50/60 Hz	
	Max Power	1000W@220V, 350W@110V	
Electronics	Display	5-inch 1280*720 Touch Screen	
	Connectivity	Wi-Fi,Bambu Bus	
	Storage	4GB EMMC and Micro SD Card Reader	
	Control Interface	Touch Screen, APP, PC Application	
	Motion Controller	Dual-Core Cortex M4	
	Application Processor	Quad ARM A7 1.2 GHz	
	Neural-Network Processing Unit	2 Tops	
Software	Slicer	Bambu Studio Support third party slicers which export standard G-code such as Superslicer, Prusaslicer and Cura, but certain advanced features may not be supported.	
	Slicer Supported OS	MacOS, Windows	
Wifi	Frequency Range	2400MHz-2483.5MHz	
	Transmitter Power (EIRP)	≤ 21.5dBm(FCC) ≤ 20 dBm (CE/SRRC)	
	Protocol	802.11	1b/g/n
Laser (Class 2)	Wavelength	405nm, 808nm	
	Maximum Output of Laser Radiation	<1mW	



Bambu Studio Bambu Handy Please visit Bambu Lab Wiki to learn more setup and maintetance tutorials. https://wiki.bambulab.com/en/home

#### If you need support, please try either of the two approaches:

Approach 1: Creat a support ticket on Official Website



Approach 2: Create a support ticket on Bambu Handy App

